## STRATCO SHED WINDOWS

**ITRATCO** 


STRATCO SHED WINDOW INSTALLATION

## **BEFORE YOU START**

The following document describes basic details for installing Stratco Shed Windows. Please refer to the corresponding shed installation guide for detailed installation instructions, Use discretion if installing Stratco Shed Windows within an existing structure.

Stratco Shed Windows come in both Louvre and Sliding variations. Installation methods are identical for each window type.


## **COMPONENTS**

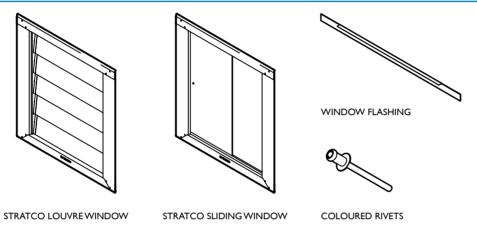

## **INSTALLATION**


Note: Consult the relevant Installation Guide for detailed instructions if fitting a window during shed construction.

Prior to window installation an opening approx. 623mm wide x 723mm high must be cut into the shed wall cladding. To ensure cladding remains rigid once the window is installed it is recommended that the window opening sits either directly above or below a structural member. This will allow the window to secure to the shed framework at the top of bottom of the window frame.

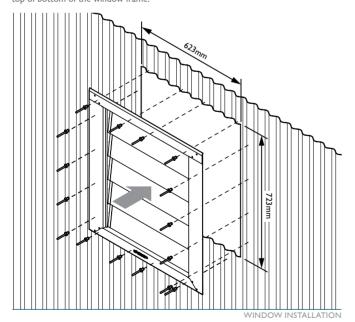

Fit the window within the opening A minimum of four evenly spaced rivets must be used along each side of the window frame. Substitute rivets for self-drilling screws if the window is fitted adjacent a structural member. All fasteners must be fixed through the crests of the wall cladding.

The window flashing must be fitted from the inside of the shed. Fit the short face of the flashing between the window and the cut edge of the wall cladding. Secure the flashing to the wall cladding with four evenly spaced rivets. Ensure all rivets are crest-fixed through to the cladding.

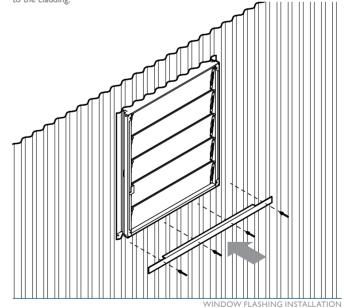



« Scan this QR code with your smart phone to find a Stratco near you.

QUEENSLAND • NEW SOUTH WALES • VICTORIA

AUSTRALIAN CAPITAL TERRITORY • SOUTH AUSTRALIA

WESTERN AUSTRALIA • NORTHERN TERRITORY

All brands and logos/images accompanied by ® or ™ are trade marks of Stratco (Australia) Pty Limited.

Ph: 1300 155 155 stratco.com.au